



SEASTAR
SOLUTIONS®

640 North Lewis Road
Limerick, PA 19468 USA
610-495-7011
www.seastarsolutions.com

“SR” CONTROL REBUILD KIT CA67870P



This control must be entirely disassembled and re-assembled to install contents of the kit. Because proper assembly and cable adjustment is so important to the boat's performance, we recommend this conversion be completed by a boat dealer or boat repair facility.

Contents	Item
Control Arm Bearings (2)	21
Shaft Bearings (2)	16
Control Arm (2)	17
Tension Strap (2)	15
Diagram	—

SR Series Rebuild Kit

Remove in order:

Remove two top screws and cover.

Remove all cables from both levers Item 17.

Remove handle set screw and handle.

Remove screws Item 7 & 8 and washers item 11.

Item 13 Bearing Housing will then pull away exposing items 16 Bearing and 17 Control Arm.

Remove Items 17 Control Arm & 21 Bearing from Main Housing Item 25.

Replace Bearings Items 16 & 21, and Control Arm item 17 as shown in the picture.

Apply a generous coating of Waterproof Marine Grease to inside of bearings.

Remove items 14 & 15 Tension Strap from Bearing Housing Item 13 and replace Item 15.

Reassemble in reverse order.

