



SEASTAR
PROTAP CONTROLLER

FOR A FAST GETAWAY



 **SEASTAR**
SOLUTIONS®

Reach max speed fast with a ProTap controller in Bay/Bass-B mode.

When you order a ProTap controller in B Mode you no longer need to look at the gauge or the back of the boat to adjust your Jackplate or engine trim to your favorite position. Let ProTap memorize it for you. Hold the ProTrim switch up or down for 1 second to recall the pre-memorized positions.

Fine tune engine height and trim by quickly tapping on the ProTrim switch. Jackplate or trim will move in set increments.

Get up to your boat max speed before the competition does!

Fast shallow water reaction time with a ProTap controller in Flats-F mode.

Improve your shallow water reaction time with controller in F-Mode. Double tap ProTrim switch up or down to quickly move the Jackplate all the way up or down. Single tap up or down will move the Jackplate in 2" increments. Hold the ProTrim switch up or down for regular Jackplate movement.

You don't need to hold the switch when running into shallow water, the controller will move the Jackplate for you while you focus on steering your boat.

Engine tilt protection

In any mode, with trim sender connected directly or via NMEA 2000 network, ProTap will detect when you are moving engine to tilt range and move the Jackplate up to a predetermined safe position.

You no longer have to worry about accidentally damaging steering, transom or the engine.



pre-setup

Dual engine support

ProTap controller will synchronize 2 Jackplates to each other in any mode.

You no longer need to synchronize your engine position manually.



ProTap controller



for memorized positions

Smart memory

Preset functions

Quick up or down

Jackplate and trim bump increments

Jackplate position memory

Trim position memory

Predetermined safe position

Synchronize multiple Jackplates



SeaStar Jackplate



for superfast planing



PT2000-1P



Pro Trim Control


Fingertip trim control

Trim control the way it's meant to be... at your fingertips. With Pro-Trim from SeaStar Solutions, you can keep both hands on the wheel and concentrate on your driving.


Its clean, modern design looks at home in any cockpit and there are no cords to tangle around the steering wheel, a big plus for boats with hydraulic steering!




Single Jackplate and Gauge

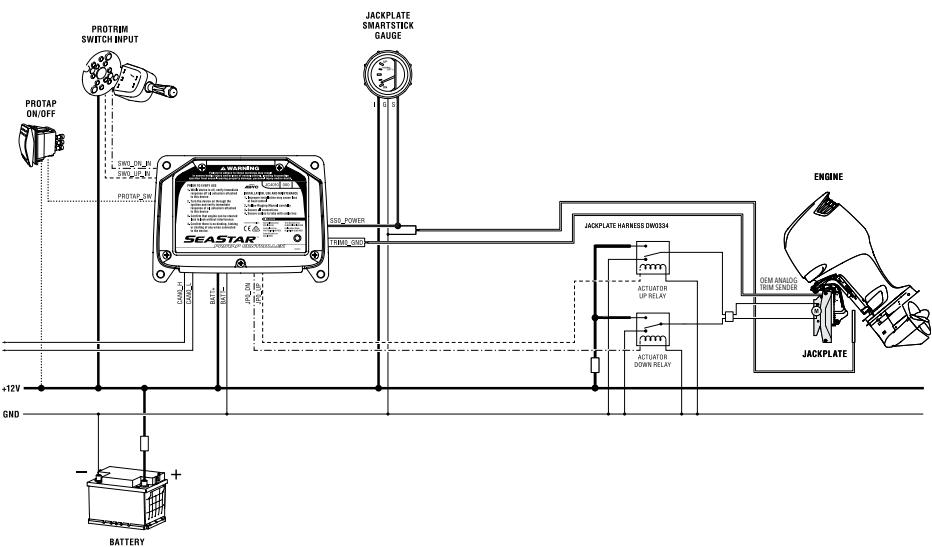

Twin Jackplate and Gauge

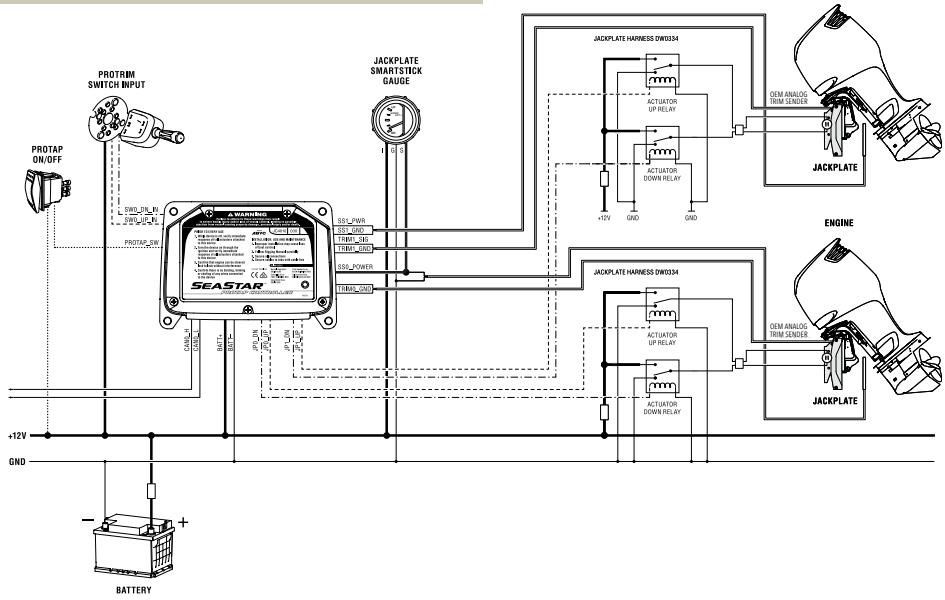


Single Jackplate, Gauge and Trim

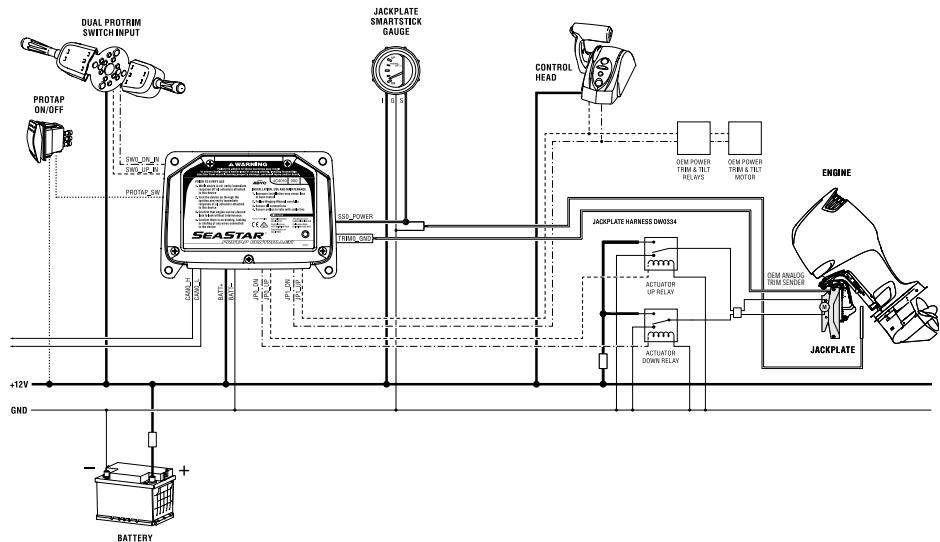

**from the
masters
in steering
control**

Ordering information

CONTROLLER PART NUMBER	SOFTWARE MODE
JC4010	B Mode-Bay/Bass Boat
JC4020	F Mode-Flats Boat

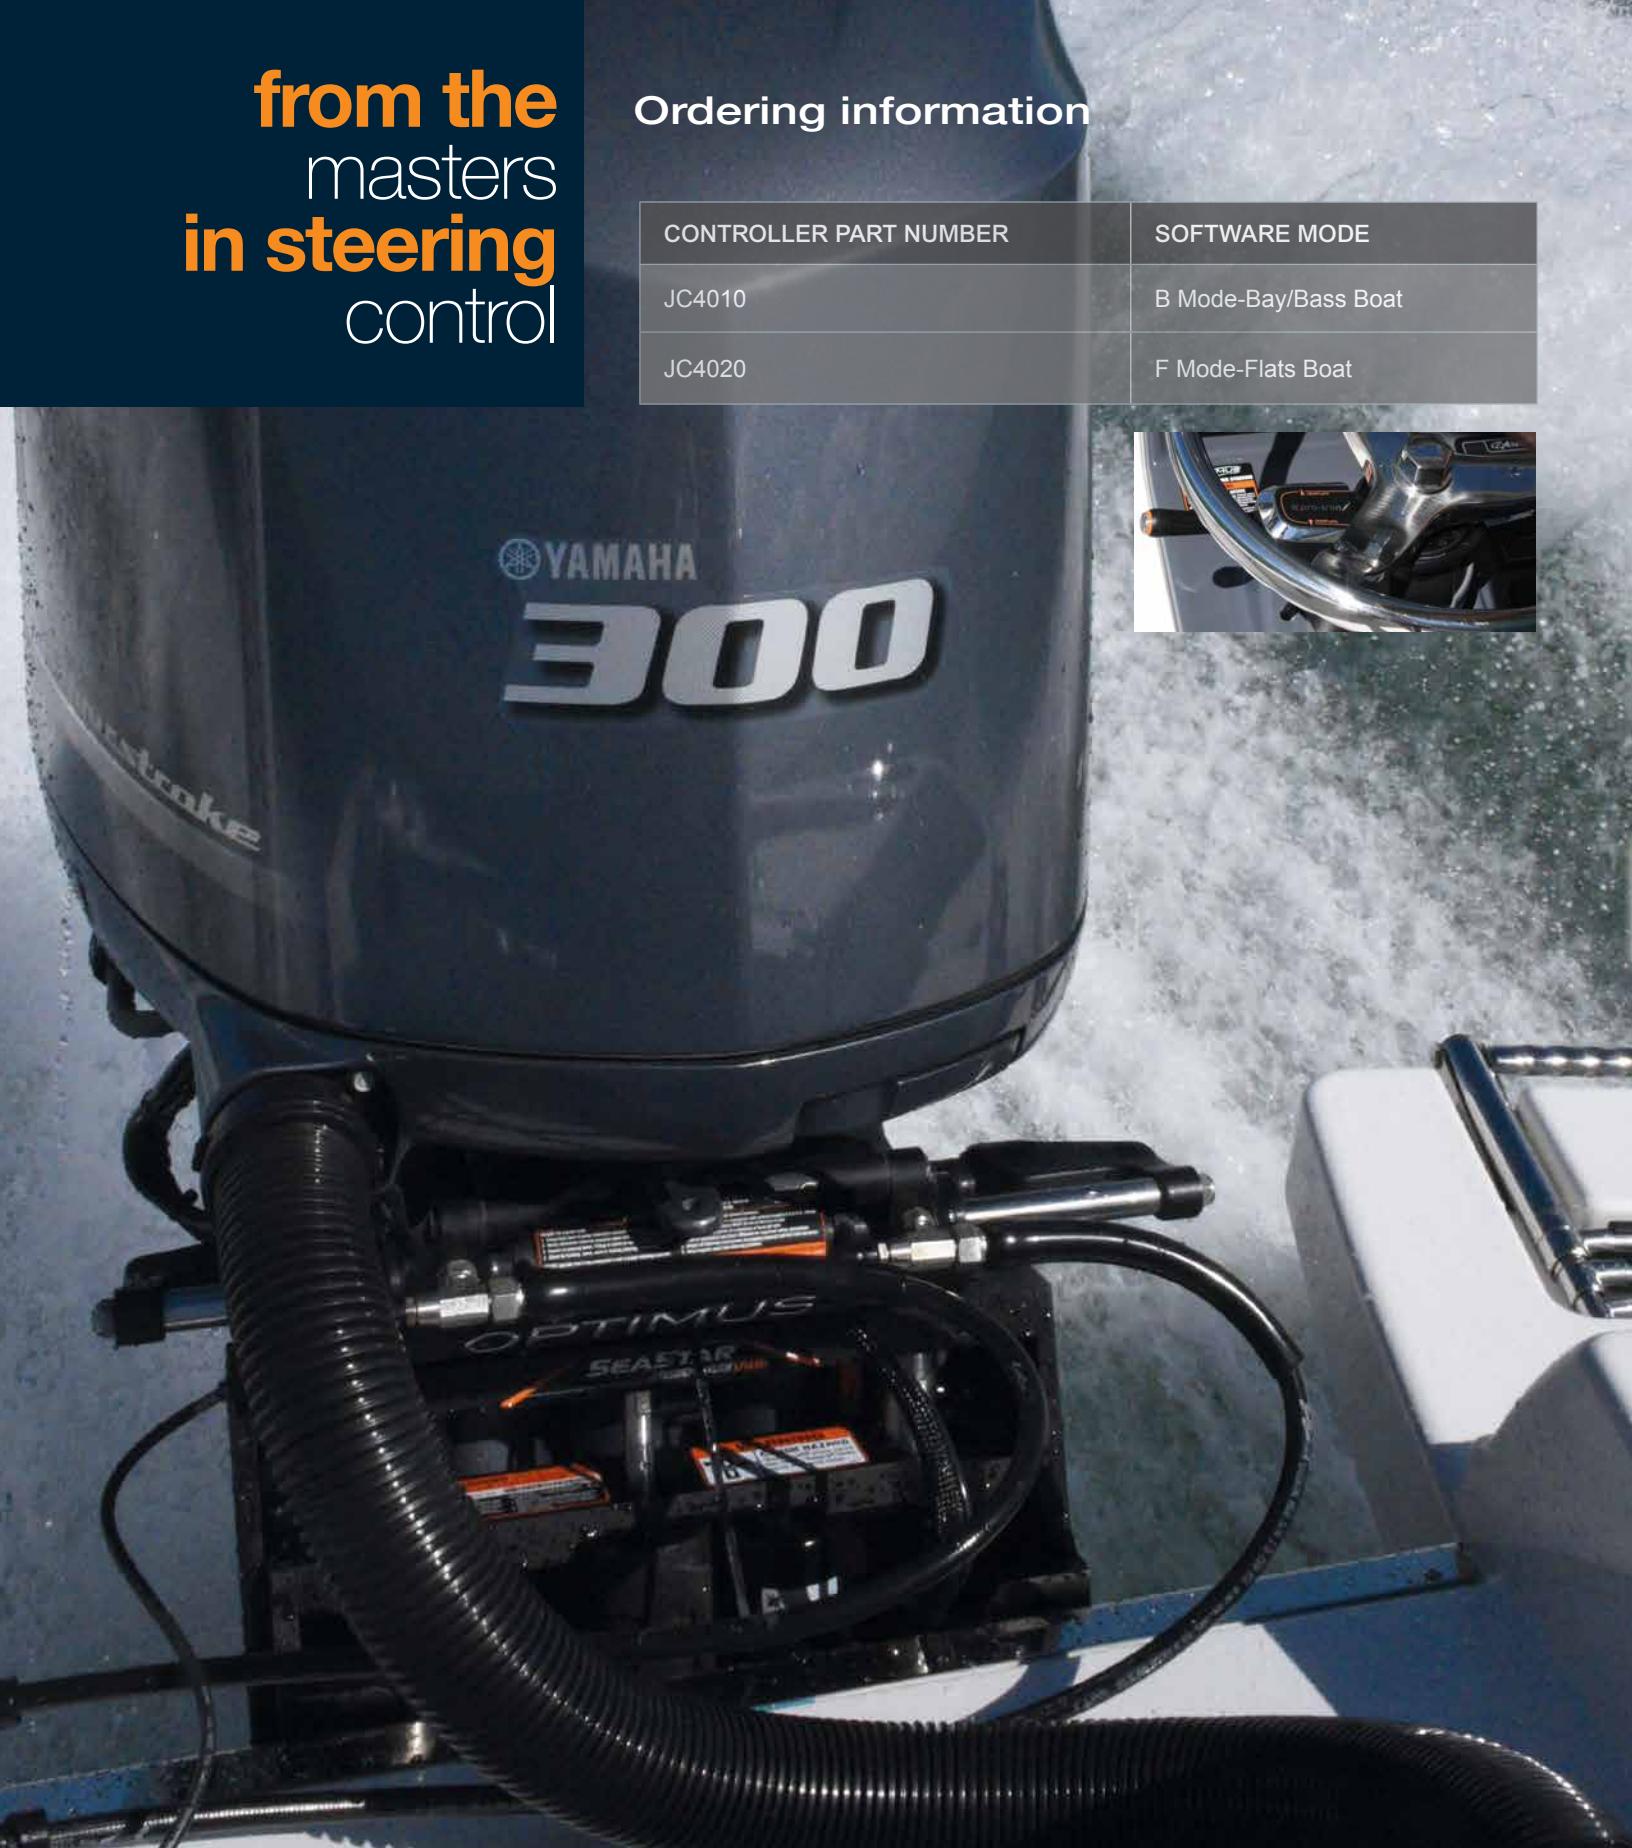

©2016 SeaStar Solutions All Rights Reserved.
Document: Pro Tap 2016. Printed in the USA.

Part No. BROCH-PROTAP



8 08282 37147 0

www.seastarsolutions.com