

OPTIMUS SEASTATION QUICK REFERENCE GUIDE

SeaStation is an automatic vessel positioning system.
SeaStation can control your vessel's position, heading, or both.

Please read your user's manual for detailed operation/safety information, and use the following as a guide to SeaStation operation.

POSITION MODE

- This mode automatically controls the vessel's position and lets heading drift freely
- The button engages/disengages POSITION MODE
- A flashing LED means engagement needs to be confirmed on the display
- A solid LED means POSITION MODE is engaged

HEADING MODE

- This mode automatically controls the vessel's heading and lets position drift freely
- The button engages/disengages HEADING MODE
- A flashing LED means engagement needs to be confirmed on the display
- A solid LED means HEADING MODE is engaged

POSITION and HEADING MODE

- POSITION and HEADING modes can be combined for complete vessel control
- The individual modes can be engaged separately or at the same time

⚠ WARNING PROPELLER INJURY HAZARD!
ONLY ENTER THE WATER WITH THE CAPTAIN'S PERMISSION
Failure to adhere to this warning may result in severe bodily injury and/or death.



929500

This boat is equipped with **SeaStation**, an automatic boat positioning system.

When **SeaStation** is engaged:

- **PROPELLERS TURN AUTOMATICALLY**
This could injure someone in the water
- The boat will suddenly move in any direction
- It is **NOT SAFE** to be in the water near the boat
- **DO NOT** enter the water or position yourself where you could fall in to the water due to sudden boat movement

**PLEASE KEEP
ON BOAT**


OVER



OPTIMUS SEASTATION QUICK REFERENCE GUIDE

To Engage SeaStation:

1. The Joystick must be in command of the vessel
2. Press the POSITION and/or HEADING buttons on the joystick
3. Press “Engage” on the display

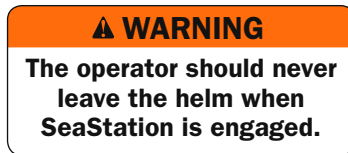

Engages SeaStation

Heading Bump:

When HEADING MODE is active, the target heading can be adjusted without disengaging SeaStation.



Drift Warnings

If the vessel drifts too far from its target position or heading, the display will alarm:



- SeaStation will continue to work towards its targets.
- It may benefit to better align your vessel with the wind or current; however, some conditions may be too strong



SeaStation Tips

- **Grab the joystick at any time for immediate control (this will disengage SeaStation).**
- Align your vessel stern to wind / current to reduce engine activity.
- POSITION MODE on its own requires less engine activity than when combined with HEADING MODE.
- SeaStation acquires your target position or heading when “Engage” is pressed on the display.
- POSITION and HEADING modes can be toggled on and off at any time while SeaStation is active. Targets will be re-acquired.



3831 No. 6 Road, Richmond,
B.C. Canada V6V 1P6
tech support: 604.248.3858
web: www.seastarsolutions.com