



Cable Adapter Kit

Part Number: 304939

To adapt 3300/33C Cables for Installation in "OMC" Controls

Installation

1. Remove jam nut, rod seal and sleeve seal from control end of cable and discard. (See Figure #1)
2. Slide cable adaptor sleeve over end of cable. Align holes at end of sleeve with groove in cable hub and install retainer clip through holes. (See Figure #2) Lock retainer clip in place by bending extended tab against the adaptor sleeve.
3. Screw terminal onto cable rod end until threads are bottomed.
4. Install cables in control. For installation of shift and throttle cables into remote control, refer to instructions packaged with control unit.

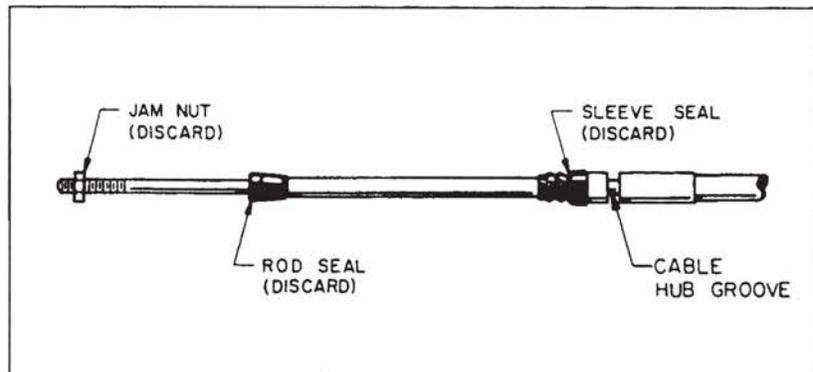


Figure 1

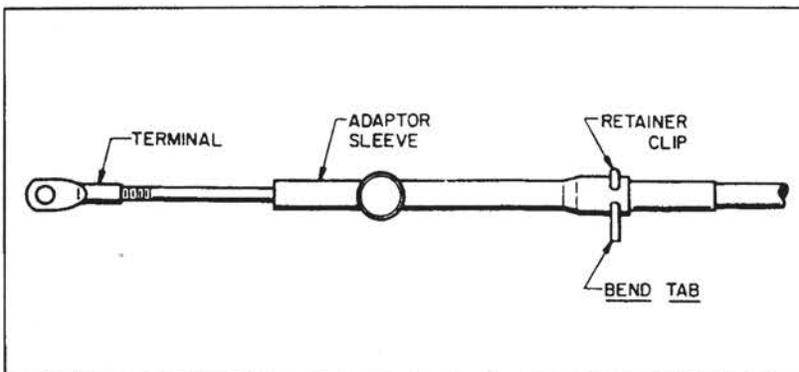


Figure 2

