



MOUNTING CONFIGURATIONS & SYSTEM SCHEMATIC


While using the table below be sure that your steering cylinder is at mid-stroke as shown in the figure right to ensure the cylinder operates correctly.

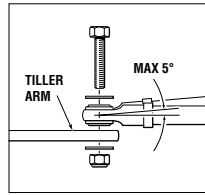

Attachment to Tiller Arm, recommended per ABYC.

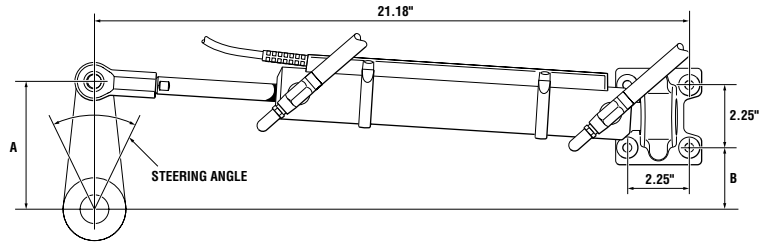

Model EC5380			
STEERING ANGLES			
50°		60°	
A	B	A	B
8.33"	6.43"	7.04"	4.98"
11,004 in-lbs		8,887 in-lbs	
STEERING ANGLES			
70°		80°	
A	B	A	B
6.14"	3.91"	5.48"	3.07"
7,328 in-lbs		6,115 in-lbs	

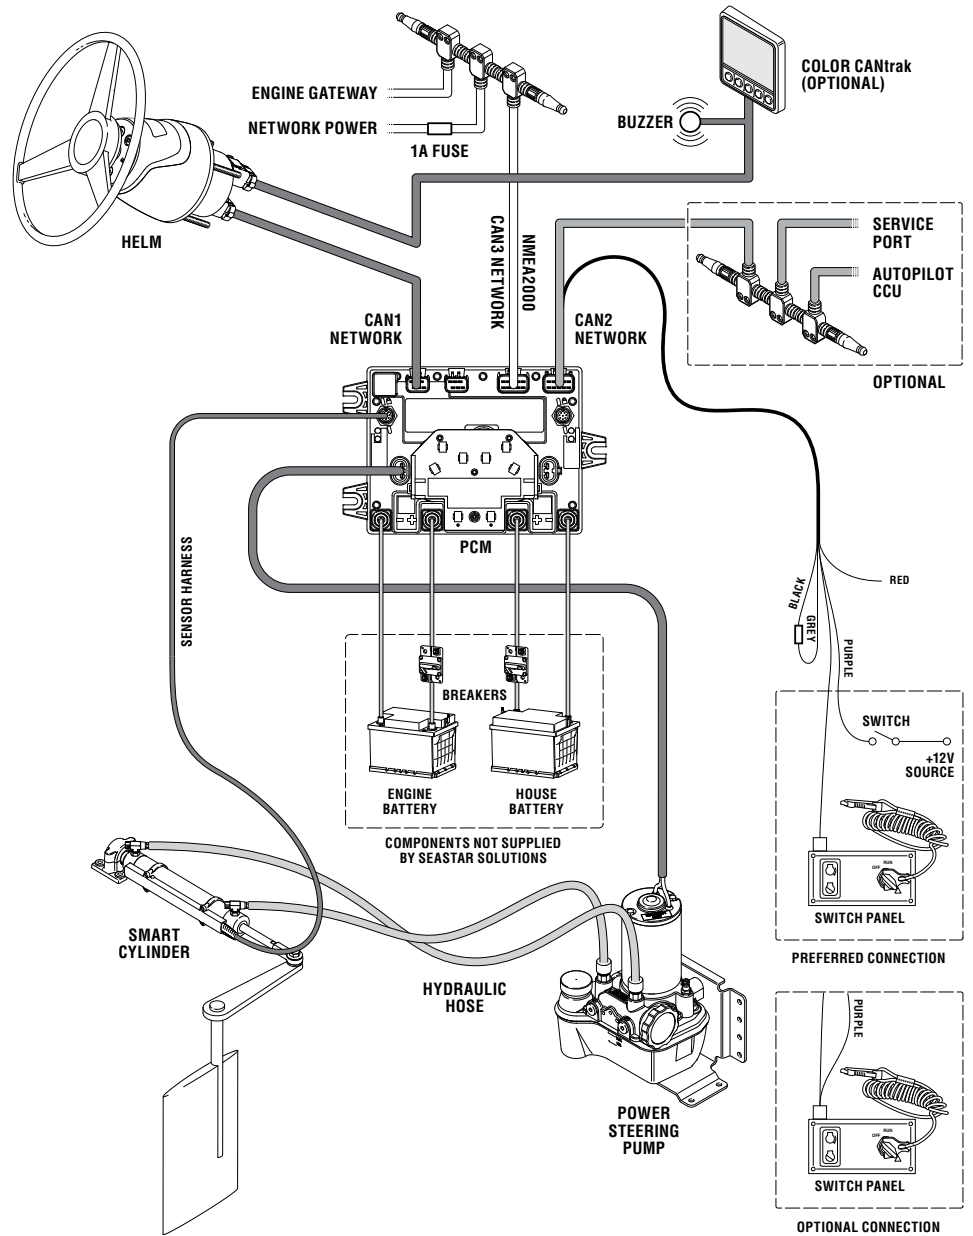

Example of single rudder system schematic.

Issue Date - August 2017
Issue Number - 469258B